

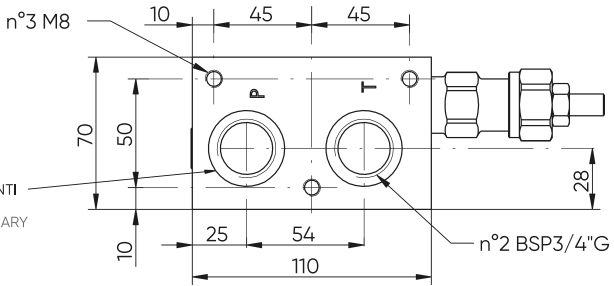
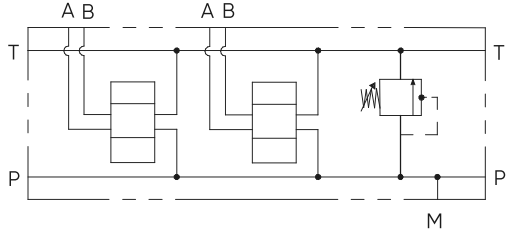
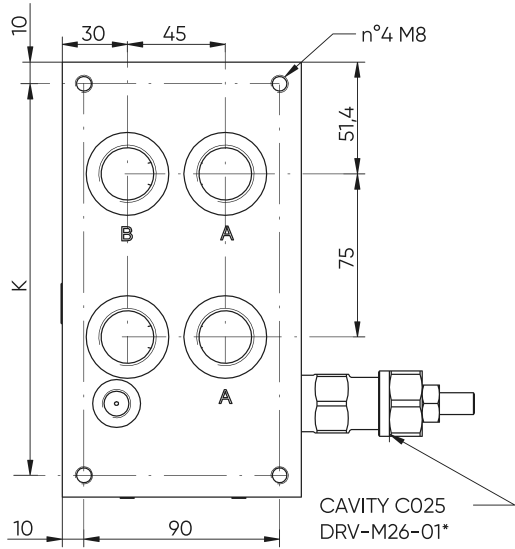


Schema idraulico /
Hydraulic scheme

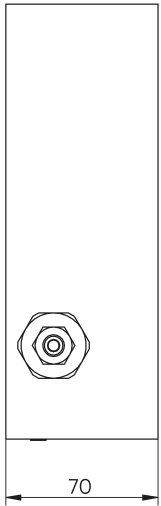


INTERFACCIA AUSILIARE SU ELEMENTI
AGGIUNTIVI (USARE OR2137)
INTERFACE FOR ADDITIONAL AUXILIARY
ELEMENTS (USE OR2137)

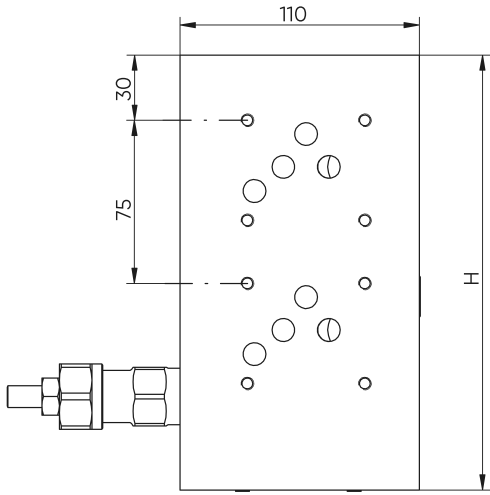

n°2 BSP3/4"G

INTERFACCIA AUSILIARE SU ELEMENTI
AGGIUNTIVI (USARE OR2137)
INTERFACE FOR ADDITIONAL AUXILIARY
ELEMENTS (USE OR2137)

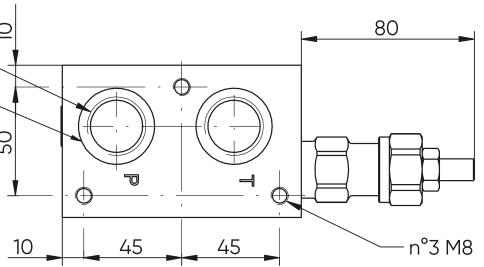

Tipi di regolazione /Regulation type

- H** Vite con chiave esagonale (STD)
Hexagonal head screw
- C** Cappuccio invariabile (STD)
Cover cap not adjustable
- K** Pomolo
Knob

POS	02	03	04	05	06
H	200	275	350	425	500
K	180	255	330	405	480

E_10 - 05 -

S = STEEL
A = ALUMINIUM

12 = BSP 1/2G
34 = BSP 3/4G

MOUNTING POSITIONS:02÷06





0 = WITHOUT RELIEF VALVE
1 = WITH RELIEF VALVE
2 = RELIEF VALVE READY

OMETTERE / OMIT
H = HEX. HEAD SCREW (STD)
C = COVER CAP (STD)
K = KNOB


0 = WITHOUT RELIEF VALVE
1 = 5-55 bar
2 = 25-110 bar
3 = 75-250 bar

*see CARTRIDGE VALVES datasheets

Schema idraulico /
Hydraulic scheme

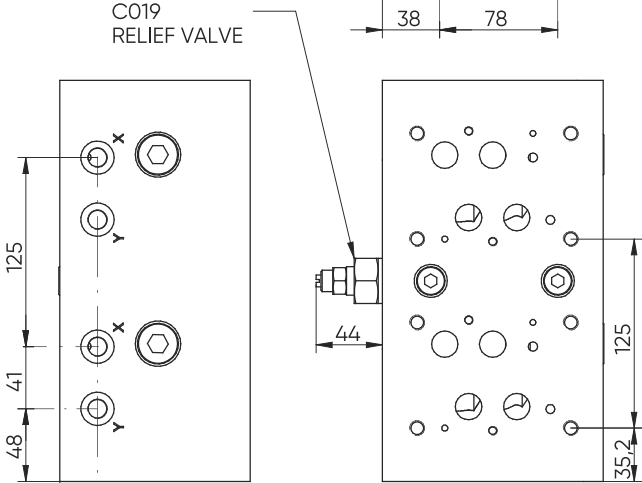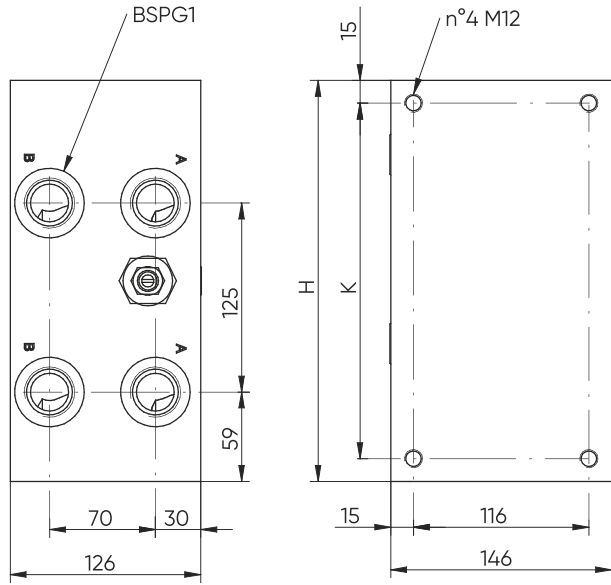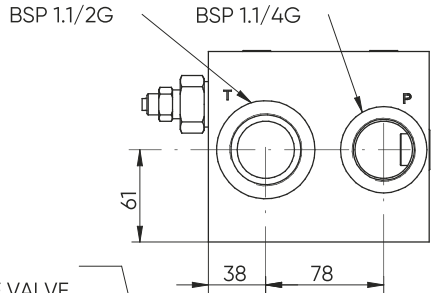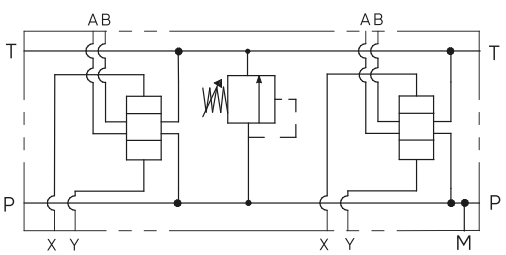

BSP 1.1/2G

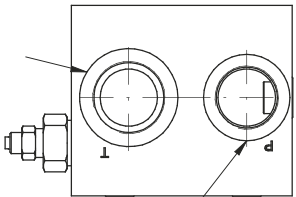

BSP 1.1/4G

POS	02	03	04	05
H	265	390	515	640
K	235	360	485	610

E_16 - 06 - 100 -

S = STEEL

MOUNTING POSITIONS:02÷05

0 = WITHOUT RELIEF VALVE
1 = 10-245 bar
2 = 245-350 bar

0 = WITHOUT RELIEF VALVE
1 = WITH RELIEF VALVE
2 = RELIEF VALVE READY